

EZFLOW^{XR} Hydraulic Trap



OPERATION AND REMOTE PROGRAMMING




Easy Flow Operation & Remote Programming Instructions

Thunderstone Manufacturing, LLC.
3400 West O Street
Lincoln, NE 68528
402-435-4249
(Fax) 402-438-3918
www.thunderstonemfg.com




Keypad Controller Operation - Manual Operation

1. Power on the keypad controller by holding the **"FRONT" "OPEN"** and **"CLOSE"** buttons on the keypad simultaneously for 5 seconds or until the blue light comes on to indicate the system is activated.
2. Press desired button to perform the required operations.
3. **"AUX"** buttons will control optional work lights.
4. Power off keypad controller when finished.
Push and hold the **"FRONT" "OPEN"** and **"CLOSE"** buttons on the control box simultaneously for 5 seconds or until blue keypad light goes off.

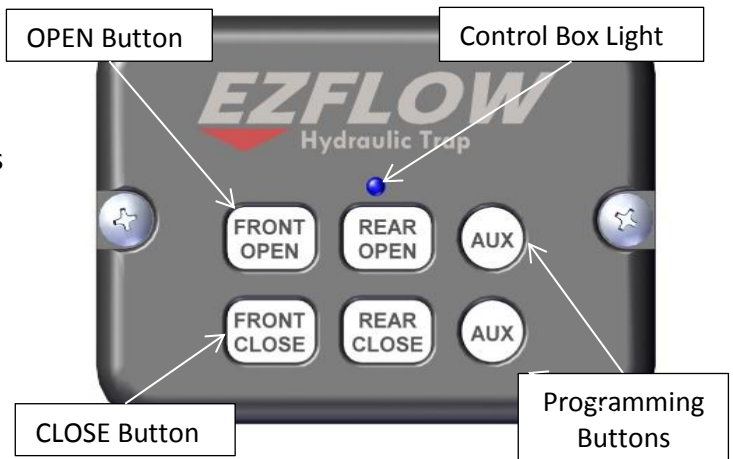

Programming Remote to Easy Flow Control Box


1. Power on the keypad controller by holding the **"FRONT" "OPEN"** and **"CLOSE"** buttons on the keypad simultaneously for 5 seconds or until the blue light comes on to indicate the system is activated.
2. Open the lid on the remote and observe the flashing light.
3. Press the **"Mode"** button two times and wait two seconds for remote to toggle to **"Front Hopper"** Mode. (First two lights flashing)
4. Repeat steps 2 - 3 for each remote to be programmed. Up to four remotes can be programmed. Have all remotes ready for steps 5 and 6.
5. Press and hold the two **"AUX"** buttons on the keypad controller simultaneously for 10 seconds until the blue flashing light stays solid then release.
6. The light on the keypad controller should now be blinking violet. Press and hold the **"On/Open"** button on the first remote for 2 seconds until the blue flashing light turns white then release the button. Keypad light should then continue blinking violet.
7. Repeat step 6 for up to four remotes to be programmed.
8. Once all remotes are programmed press the top **"AUX"** button to exit programming. The keypad controller light should blink two sets of red indicating the remotes have been saved.
9. Test functions of the remote by following the steps on the following page.

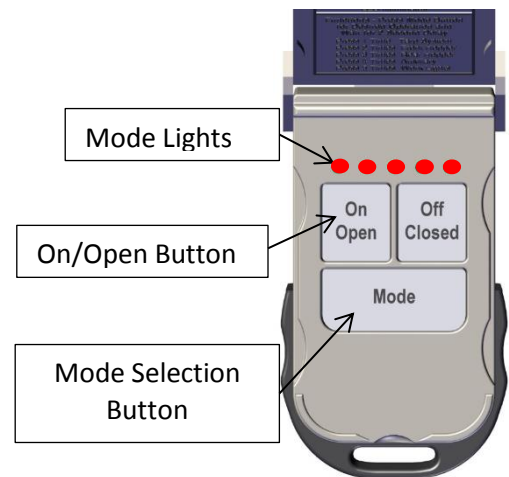

Keypad Controller Operation - Wireless Operation

Remote functions also listed on decal under lid of remote.

1. To power **ON** the EZ Flow system using the remote.
 - a. Open the remote lid and press the “**Mode**” button two times then wait two seconds for remote to toggle to the “**Front Hopper**” mode (First two lights flashing).
 - b. Press and hold the “**On/Open**” and “**Off/Closed**” buttons on the remote simultaneously for 5 seconds or until the blue keypad controller light comes on to indicate the system is activated.
2. To use the front hopper doors.
 - a. Open the remote lid and press the “**Mode**” button two times then wait two seconds for remote to toggle to the “**Front Hopper**” mode (First two lights flashing).
 - b. Press either “**On/Open**” or “**Off/Closed**” buttons to perform the desired operation.
3. To use the rear hopper doors.
 - a. Open the remote lid and press the “**Mode**” button three times then wait two seconds for remote to toggle to the “**Rear Hopper**” mode (First three lights flashing).
 - b. Press either “**On/Open**” or “**Off/Closed**” buttons to perform the desired operation.
4. To power **OFF** the EZ Flow system using the remote.
 - a. Open the remote lid and press the “**Mode**” button two times then wait two seconds for remote to toggle to the “**Front Hopper**” mode (First two lights flashing).
 - b. Press and hold the “**On/Open**” and “**Off/Closed**” buttons on the remote simultaneously for 5 seconds or until the blue light turns off to indicate the system is deactivated.
5. To control optional work lights.
 - a. Open the remote lid and press the “**Mode**” button four or five times depending on which work light you want to control then wait two seconds for remote to toggle to the “**Work Light**” mode (First four or five lights flashing).
 - b. Press desired button to perform the required operations. On/Off.

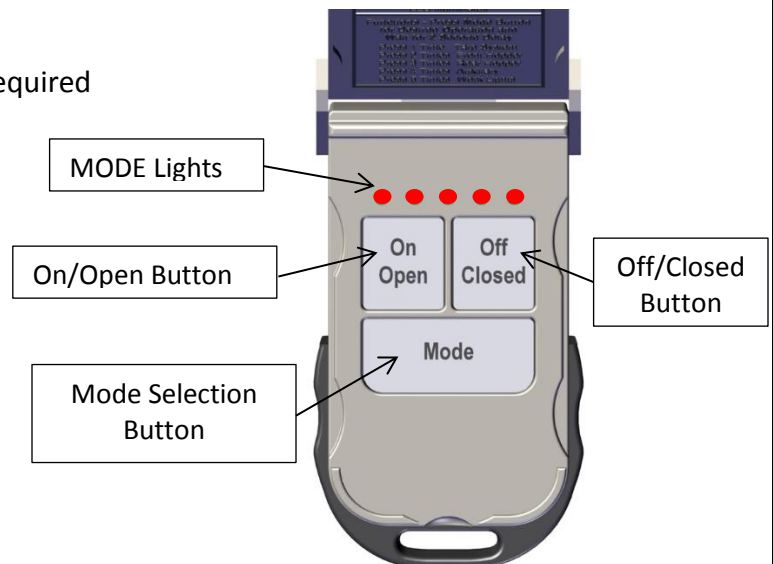

EZ Flow Cylinder Disconnect *Emergency Operation*(if equipped)

1. Locate poppet valve buttons. (Fig A)
 - a. Top Button (1) is for front door.
 - b. Bottom Button (2) is for rear door.
2. Push & hold each button individually for approx. 15 secs or until system is depressurized.
3. When system has been depressurized, unlatch quick release pin from clevis & remove. (Fig B) Repeat this step on all cylinders as needed.
4. Door(s) are now disconnected from the cylinders and can now be operated manually with crank handle if equipped.

