

# **EZFLOW<sup>XR</sup>**

**Hydraulic Trap**



## **EZ Flow<sup>XR</sup> Override Operation Instructions**





Thunderstone Manufacturing, LLC.  
3400 West O Street  
Lincoln, NE 68528  
402-435-4249  
(Fax) 402-438-3918  
[www.thunderstonemfg.com](http://www.thunderstonemfg.com)


## EZ Flow<sup>XR</sup> Hydraulic Trap - Manual Override System

### • How to use the manual open system.

- Locate poppet valve buttons behind the motor on the blocking valve.
  - The Top Button (1) is for front door.
  - The Bottom Button (2) is for rear door

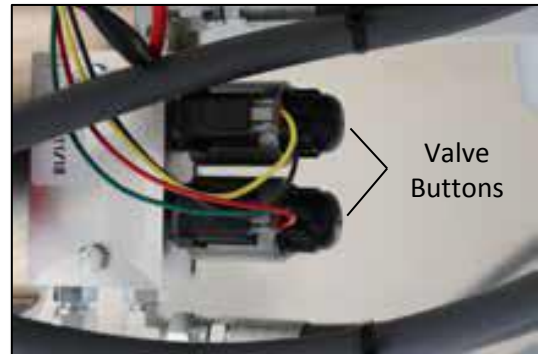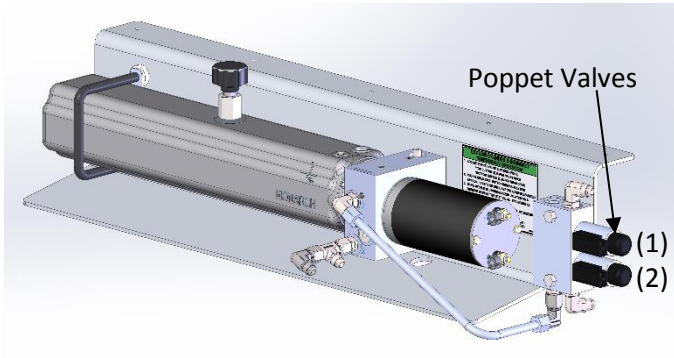

- Push & hold each button individually for approx. 15 secs or until system is depressurized.
- When system has been depressurized, unlatch quick release pin from cylinder & remove.

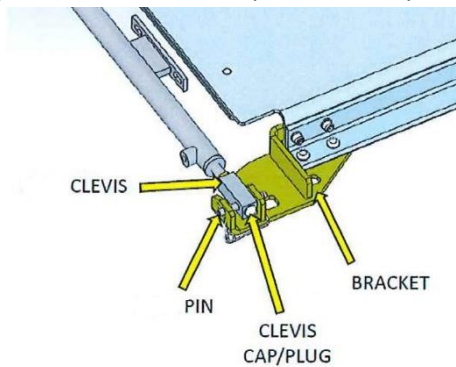

- Repeat this step on all cylinders as needed.
- Door(s) are now disconnected from the cylinders and can now be operated manually.
- Remove the straps from the storage box mounted on the motor bracket.
- Hook the straps to the door by placing the hooks into the holes in the door.
- Slide the straps through the slots in the shaft at least 6".
- Turn the crank shaft by hand to wind the strap onto the shaft until it gets tight.
- Using the dolly crank turn the shaft and pull open the door until the hooks are close to the crank shaft.
- Remove the hooks from the door.
- When the tub is mostly empty pull the door by hand to finish opening and emptying the tub.

